

Slide HOLD in the direction of the arrow.
When you press any button, “*Hold d*” appears in the display and you cannot operate the player.

To unlock, slide HOLD back.