Test Procedure	TP 309
Title	Page Number
Horiba Emission Analysis System NOx Efficiency	1 of 20
Originator	Supersedes
Jeff Cieslak	N/A
Responsible Organization	Computer Program
Ozone/PM Vehicle Group	Horiba NOx Program
Type of Test Report	Data Form Number
NOx Efficiency Check Results	N/A
Report Distribution	Implementation Date
Diagnostics File	03-01-2000

Implementation Approval

Original Test Procedure Authorized by EPCN #246 on 03-01-2000

Revision Description

Note: Specific brand names in this procedure are for reference only and are not an endorsement of that product.

Table of Contents

1.	Purpose
2.	Test Article Description 4
3.	References
4.	Required Equipment 4
5.	Precautions 5
6.	Visual Inspection 5
7.	Test Article Preparation 5
8.	Test Procedure 6
9.	Data Input 18
10.	Data Analysis
11.	Data Output
12.	Acceptance Criteria 19
13.	Quality Provisions 19

<u>Attachment</u>

Figures

Figure 1 Command Screen	б
Figure 2 User Level	6
Figure 3 On-Screen Keyboard	7
Figure 4 Utility Selection	7
Figure 5 Checks/Tests Button	8
Figure 6 Line Button	8
Figure 7 Comp Button	9

Figures Continued

Figure 8 Range Button
Figure 9 Parameter Setup Button
Figure 10 Internal Gas to GDC 10
Figure 11 Condition in 'b' Window 10
Figure 12 Parameter Setup for Purge 11
Figure 13 Parameter Setup for Tl 11
Figure 14 Parameter Setup Menu 12
Figure 15 Mode Display Window 12
Figure 16 Ozone Initial Count Display Window
Figure 17 Ozone Step Count Display Window
Figure 18 Start Button
Figure 19 Analyzer Calibration Panel 14
Figure 20 N0x Subpanel 15
Figure 21 Test Results Subpanel 15
Figure 22 Hardcopy Full screen
Figure 23 Test Results
Figure 24 NOx Efficiency Check Panel 17
Figure 25 Command Selection
Figure 26 User Level Selection

1. Purpose

The purpose of this procedure is to describe the equipment and procedure required to perform a N0x efficiency check using the Horiba Mexa 7000 Automotive Emission Analysis System.

2. Test Article Description

Horiba Mexa 7000 Automotive Emission Analysis System.

3. References

- 3.1 "Code of Federal Regulations," Title 40, Part 86, Subpart B, Sections 89.116, 86.119, and 86.123
- 3.2 Horiba "Automotive Emission Analysis System, Mexa-7000 User's Guide"
- 3.3 Environmental Protection Agency (EPA) current safety policies
- 3.4 "Horiba MEXA 7000 Series Training Manual"

4. **Required Equipment**

4.1 Horiba Mexa 7000 Automotive Emission Analysis System:

Equipment used: Main Control Unit (MCU)

Interface Control Unit (IFC)

Analyzer Rack (ANR)

Solenoid Valve Unit (SVS)

Sample handling System (SHS)

Power Supply Unit (PSU)

Heated Analyzer (OVN)

Gas Divider (GDC)

Printer

- 4.2 Numbered flexible quick-disconnect jumper lines.
- 4.3 "NOx 100 ppm Span Gas" cylinder

5. Precautions

5.1 Cylinders containing compressed gases are used for this procedure. The technician must be familiar with the "EPA Laboratory Safety Manual" sections dealing with the safe handling, storage, and use of compressed gas cylinders.

Safety precautions must be followed when using compressed gases.

- 5.2 The Mexa 7000 Automotive Emission Analysis System must warm-up in the stand-by mode for a minimum of 2 hours after being fully powered up.
- 5.3 Exercise caution when operating heated units. Surface temperature may exceed 60 °C.

6. Visual Inspection

- 6.1 The test cell air handler should be on and test cell ambient conditions are stable.
- 6.2 The gas cylinder and equipment is checked for leakage, damage, and cleanliness.
- 6.3 The power is turned on for the analysis system and related equipment.
- 6.4 All documentation needed to operate the analysis system is present.

7. Test Article Preparation

7.1 Activate the Horiba Series 7000 Bench according to the Horiba "Series 7000 Users Guide." The Main Control Unit (MCU) computer monitor utilizes touch screen technology.

Note: If you have an internal gas divider, skip Steps 102 and 103.

- 7.2 Get the gas divider. Connect the communications cable and all gas lines from the divider to the bench and ensure that the divider is connected to a power outlet.
- 7.3 Connect the numbered flexible quick-disconnect jumper lines between the MEXA Analyzer Rack (ANR) Gas Divider Panel and the Solenoid Valve Selector (SVS) of the bench under test.
- 7.4 Turn the Gas Divider (GDC) power on. The switch is in the back of the unit. Let the divider warm up for at least 1 hour.

<u>Line Number</u>	Connection
1	Air
2	O2
3	N2
4	To GDC
5	From GDC

8. Test Procedure

The MCU computer monitor utilizes touch screen technology.

101 On the upper portion of the MCU display area, verify that "Dilute" displays in the field next to the "Line" button.

If not, touch the "Line" button. See the arrow in Figure 1.

Touch "Dilute" from the menu items that appear. See the circle in Figure 1.





102 From the Main Control Unit (MCU) "Command Screen," touch the Horiba logo in the title bar. See the arrow in Figure 2.

Touch "User Level" from the menu items that appear below the logo. See the circle in Figure 2.





103 If "Supervisor" is not the top menu item in the display window, touch "Supervisor."

Use the mouse and on-screen keyboard to enter the password, then touch "Enter." See Figure 3. "Supervisor" will appear at the top-center of the screen.





104 On the display setup portion of the screen, touch the "Menu" button. See the arrow in Figure 4. From the menu items that appear, touch "Utility." See the circle in Figure 4.

HORIEA	HEX8+7200	22	
View	Kenu	10	ata typ
	Command		O FINOU
	Utility	>	BEACH
	CANCEL		
T_	COLL/	1	
E	C02	1	
Ľ	CH4	1	

Figure 4 Utility Selection 105 At the bottom of the screen, touch the "Checks/Tests" button. See Figure 5. Touch "NOx Eff Check" from the menu items that appear.





- 106 On the "NOx efficiency Menu," touch the "NOx Efficiency Check" button.
- 107 Under "NOx Analyzer Selection" on the "NOx efficiency Check" panel, verify that the data is correct. To make a correction for "Line", "Comp", or "Range", do the following:

Touch the "Line" button. See the arrow in Figure 6. From the menu items that appear, touch "Dilute." See the circle in Figure 6.



Figure 6 Line Button 108 Touch the "Comp" button. See the arrow in Figure 7. Touch "NOx" from the menu items that appear. See the circle in Figure 7.





109 Touch the "Range" button. See the arrow in Figure 8. From the menu items that appear below the button, touch "100 ppm." See the circle in Figure 8.



Figure 8 Range Button

110 Touch the "Parameter Setup" button. See the arrow in Figure 9.





111 On the "Parameter Setup" screen:

Verify that "Internal Gas to GDC" is selected next to the "Gas Supply" button. If not, touch the "Gas Supply" button. See the arrow in Figure 10. Touch "Internal Gas to GDC" from the menu items that appear. See the circle in Figure 10.





112 Verify that "EPA" appears in the "Condition in 'b'" display window. If it does not, touch the "Condition in 'b'" button. See the arrow in Figure 11. Touch "EPA" from the menu items that appear. See the circle in Figure 11.



Figure 11 Condition in 'b' Window 113 On the "Parameter Setup" menu, under the "Analyzer Specific Delay Times for A, a, b, c, d, B" heading, verify that "30" is in the yellow highlighted "Purge" field. See the circle in Figure 23. If not, touch in the field and use the on-screen keypad to enter the correct data. See Figure 12. On the keypad, touch the "OK" button.

		Para	meter Setup				8	9	BS
Gas Supply	Internal	gas to GDC	Condition	in 'b'	EPA		5	6	Œ
Standard Gas	463.9	ррш					2	3	Exp
Purge	Analyzer Sp Ti	ecific Delay T2	/ Times for . 13	A,a,b,c,d,B T4	Tolerance	0			Ins
30.00	60.00	8.00	0.30	30.00	1.00		4	-	
		OK	CANCEL				OK	CA	NCEL

Figure 12 Parameter Setup for Purge

114 On the "Parameter Setup" menu, under the "Analyzer Specific Delay Times for A, a, b, c, d, B" heading, verify that "60" is in the yellow highlighted "T1" field. See the circle in Figure 13.

If it is not, touch in the field and use the on-screen keypad to enter the correct data. See Figure 13. On the keypad, touch the "OK" button.

		_				7	8	9	BS
Gas Suppl	y Internal	gas to GDC	Condition	in 'b'	EPA	4	5	6	Œ
Standard Ga	s 463.9	ppm				1	2	3	Exp
Purge	Analyzer Spe Ti	cific Delay T2	Times for a	A,a,b,c,d,B T4	Tolerance	0		-	Ins
30.00	60.00	8.00	0.30	30.00	1.00		+	+	
		OK	CANCEL	J			OK	CA	NCEL

Figure 13 Parameter Setup for Tl

TP 309	I	Horiba Emissio NOx l	n Analysis Efficiency	System		Page 12 of 20
115 O a, "" T	on the "Parameter b, c, d, B" headi T2" "T3" T4" "Tole ouch the "OK" b	Setup" menu, u ng; the followir erance" utton. See the a	under the "Ang fields can urrow in Fig	analyzer Speci not be change ure 14.	ific Del d. See	lay Times for A, Figure 14:
	Gas Supply	Internal gas to G	C Condition 1	n "b" EPA		
	Standard Gas	463.9 ppm				
	A	nalyzer Specific Del	ay Times for A,	a,b,c,d,B		
	Purge	11 12	13	T4 Toler	ance	
	30.00	8.00	0.30	30.00 1.0	00	
		OK	CANCEL	I		
		Fig Parameter	ure 14 Setup Men	u		

116 When the "NOx efficiency Check" panel is displayed, verify that "Auto" appears in the "Mode" display window under the "Test Control" heading.

If it is not displayed, touch the "Mode" button. See the arrow in Figure 15. Touch "Auto" from the displayed menu items. See the circle in Figure 15.



Figure 15 Mode Display Window

117 Verify that "200" appears in the "Ozone Initial Count" display window.

If it is not displayed, touch in the yellow user changeable field next to the "Ozone Initial Count" heading. See the circle in Figure 16. Enter "200." with the onscreen keypad. Touch "OK" to close the keypad. See Figure 16.

			7 8	9 IS
10x Analumer	NOr Efficience	y Oleck	4 5	6 Œ
Line	Di lute	Node Auto	1 2	3 Exp
Comp Range	NDx 100pps	Start	0 .	- Ins
Parameter Setup	Standard San Internal Adda pp			
Gene Initial Court	HOx Effsclane	Step Court 20 275 Results	OK	CANCEL

Figure 16 Ozone Initial Count Display Window

118 Verify that "20" appears in the "Ozone Step Count" display window.

If it is not displayed, touch in the yellow user changeable field next to the "Ozone Step Count" heading. See the circle in Figure 17. Enter "20." with the on-screen keypad.

Touch "OK" to close the keypad. See Figure 17.

			7 8 9 IS
	NDs Efficient	y Oleck	4 5 6 Œ
N0x Analyze	r Selection	Test Control	
Line	Dilute	Node Auto	1 2 3 Exp
Comp	NDx	Start	
Range	100ppm		0 Ins
Parameter Setup	Standard Ges Internal 40.0 cm		
Grove Initial Cour	ut: 200 Ozer	• Step Counts 2/5 Results	
Weberge - A first	NOx Elfiscione	y Etapa	OK CANCEL

Figure 17 Ozone Step Count Display Window

119 Under "Test Control," touch the "Start" button. See the arrow in Figure 18





120 When the "Analyzer Calibration" panel appears, an automatic zero and span calibration of the analyzer will occur. The indicator flashes green during zero and flashes blue during span. See Figure 19.

If "Calibration failed" appears, touch the "Restart Cal" button. See arrow 1 in Figure 19.

When the zero and span calibration is completed, touch the "OK" button. See arrow 2 in Figure 19.



Figure 19 Analyzer Calibration Panel

- 121 When the test begins, a subpanel will appear. It will display the "Reading Step X" (where X = 1 through 6) number in the upper left corner. See Figure 20
- **Note:** The process can be stopped at any time by touching the "Cancel" button.



Figure 20 N0x Subpanel

122 When complete, the "Results" subpanel will automatically display "Pass" or "Fail" under the "Test Results" heading. See the circle in Figure 21.

If "Fail" is displayed, notify a PNGV senior technician and wait for instructions before proceeding.

If "Pass" is displayed, wait for the converter checker sequence to finish



Figure 21 Test Results Subpanel

123 Touch the Horiba logo button. See the arrow in Figure 22.

Touch "Hardcopy" from the menu items that appear below the logo. See the leftside circle in Figure 22. Then touch "Full screen" from the next menu. See the right-side circle in Figure 22. A hardcopy of the NOx efficiency test results will print on the control room printer. See the attachment.



Figure 22 Hardcopy Full screen

- 124 File the print-out in the diagnostics file.
- 125 Touch the "Cancel" button. See the arrow in Figure 23. The "NOx Efficiency Check" panel will appear.



Figure 23 Test Results 126 On the "NOx Efficiency Check" panel, touch the "Cancel" button. See the arrow in Figure 24.



Figure 24 NOx Efficiency Check Panel

127 Touch the "Menu" button. See the arrow in Figure 25. Then touch "Command" from the menu. See the circle in Figure 25.





128 Touch the "Horiba" logo. See the arrow in Figure 26. Touch" User Level" from the menu. See the circle in Figure 26. Touch "Normal" from the next menu.



Figure 26 User Level Selection

9. Data Input

- 9.1 On the NOx Efficiency Check menu, the operator selects 100 ppm concentration.
- 9.2 On the "Parameter Setup" menu, under "Analyzer Specific Delay Times for A, a, b, c, d, B," The operator enters "30" in the ""Purge" field, if necessary.
- 9.3 On the "Parameter Setup" menu, under "Analyzer Specific Delay Times for A, a, b, c, d, B," The operator enters "60" in the "T1" field, if necessary.
- 9.4 On the NOx Efficiency Check menu, the operator enters "200" in the "Ozone Initial Count" field, if necessary.
- 9.5 On the NOx Efficiency Check menu, the operator enters "20" in the "Ozone Step Count" field, if necessary.

10. Data Analysis

10.1 When the test is complete, the operator verifies that the "Results" subpanel automatically display the test results as "Pass." If the results "Status" displays "Fail", the operator notifies a senior technician

11. Data Output

11.1 The operator prints a hardcopy of the NOx efficiency test results on the control room printer and files the print-out in the diagnostics file.

12. Acceptance Criteria

- 12.1 The correct data from the "Cylinder Site Assignment Program" sheet must be entered on the Span Gas Set screen.
- 12.2 On the "Parameter Setup" menu, under "Analyzer Specific Delay Times for A, a, b, c, d, B," the "Purge" field must contain "30."
- 12.3 On the "Parameter Setup" menu, under "Analyzer Specific Delay Times for A, a, b, c, d, B," the "T1" field must contain "60.
- 12.4 "200" must appear in the "Ozone Initial Count" display window.
- 12.5 "20" must appear in the "Ozone Step Count" display window.
- 12.6 A zero and span calibration must be performed prior to the NOx efficiency check procedure.
- 12.7 The "NO2 Conc. Limit" shall not exceed 5% indicating "Pass" on the "Results" subpanel.
- 12.8 The "NOx Eff. Limit" shall be a minimum of 90% indicating "Pass" on the "Results" subpanel.

13. Quality Provisions

- 13.1 The technician checks to ensure all acceptance criteria (Section 12) have been met.
- 13.2 Prior to use, the Horiba "Automotive Emission Analysis System shall be warmed-up in the stand-by mode for a minimum of 2 hours after being fully powered up.
- 13.3 The divider must warm up for at least 1 hour before starting the procedure.

Attachment A NOx Efficiency Check Report

HORIBA	MEXI1-7200		545.5.40	Stor-Ion	Dyna D004	12/14/1999 (8:47	ALARN
View	N	Selection	ection Test Co		trol	Offline	
	Line Comp Range		Dilute NOx 100ppm		Mode	Auto	
					Slart		
	Parameter Setup		Standard Gaa Internal SL7 con				
	Ozone Initial Count:		200 0zone S		Step Count: 20	Z/S Results	
		G-m	NOx E	fficiency Mada	Steps	Conc	
	NO		Station and a station				
		OFF	CRI	NO	>= 82,73	\$4,1577	
	ь	CN	(N	NO	13,7883	14,2206	
	c	Qi	0N	NDx		\$3.0500	
	d	OFF	ON	NOx		\$3,9747	
	104	OFF	OFF	NOx	c= 96.51	97.083	
		Test Status		0.80,233	Resul		
SYSTEN	Done Reading Step 3 Reading Step 4 Done Reading Step 4 Reading Step 5				[ff = [1+(c-d)/(n-b)]*[0	x Status 0 99.54 Pass	
MEXA	Iono Reading S Reading Step 6 Iono Reading S	tap 5 tap 6		F.	102 in N	0 0.19 Pass	
	CANCEL						